

*If you are using a printed copy of this procedure, and not the on-screen version, then you **MUST** make sure the dates at the bottom of the printed copy and the on-screen version match.  
The on-screen version of the Collider-Accelerator Department Procedure is the Official Version.  
Hard copies of all signed, official, C-A Operating Procedures are kept on file in the C-A ESHQ Training Office, Bldg. 911A.*

## C-A OPERATIONS PROCEDURES MANUAL

### 12.39 Vacuum Pumping MP6 – SF6

Text Pages 2 through 5

#### Hand Processed Changes

<u>HPC No.</u>	<u>Date</u>	<u>Page Nos.</u>	<u>Initials</u>
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____

Approved: \_\_\_\_\_ ***Signature on File*** \_\_\_\_\_  
Collider-Accelerator Department Chairman Date

M. Wiplich

## **12.39 Vacuum Pumping MP6 – SF6**

### **1. Purpose**

The purpose of this procedure is to define the sequence of activities required to vacuum pump MP-6 when it has been filled with SF6 mix.

### **2. Responsibilities**

It is the responsibility of the person or persons executing this procedure to observe all safety rules.

### **3. Prerequisites**

The person or persons executing this procedure shall have all formal training required of a TVDG Operator.

### **4. Precautions**

None

### **5. Procedure**

- 5.1 Insure that the Rotating Shafts are OFF.
- 5.2 Turn Recirculator OFF.
- 5.3 Turn Hot Water Pump (J- 130) OFF and Close the Hot Water Valve.
- 5.4 Close HCV-27 and verify that FCV-1 and HCV-23 are Closed.
- 5.5 Close PCV-1 (Turn PCV-1 Down to 0).
- 5.6 Close HOV-11, HOV-9 and HOV-15.
- 5.7 Open HOV-8.
- 5.8 Open HCV-53 while Pressing HOV-57 and reading Gauge P-1. Gauge P-1 should indicate near 0.
- 5.9 Verify that HCV-31 is Open.
- 5.10 Open HCV-1.
- 5.11 Set PCV-33 to Valve and Manual and Open to about 30.

- 5.12 Continue pumping with Compressors until there is a 12" Vacuum in the Tank as read on P-1.
- 5.13 Start Vacuum Pump (J- 105). Record Time, Tank Pressure, LE Vac and HE Vac on Pumpout Log Sheet
- 5.14 Close HCV-29.
- 5.15 Verify that PCV-33 is on Valve and Manual. Open PCV-33 Slowly while watching Gauge P-1. Adjust PCV-33 to keep the Pressure as read on P-1 at about 0 PSI and stable.
- 5.16 Set PCV-33 to Regulate and Seal.
- 5.17 Align Red Pointer with Black Indicator which should be at or very close to 0.
- 5.18 Switch PCV-33 to Auto. Now the Vacuum Suction Valve (PCV-33) is being regulated to keep the Vacuum Pump output pressure into the Compressors at the set pressure of about 0 PSI.
- 5.19 Set PCV-33 to Valve. The Red Pointer now indicates how much PCV-33 is open. Gauge P-1 will start to go negative after PCV-33 is fully open.
- 5.20 When the Vacuum as read on the Gauge directly above the Vacuum Pumps is 22" (P- 1 will be about -7" at this point), put PCV-33 in Valve and Manual and Close it to 70.
- 5.21 Start Blower No. 1. Record Time, Tank Pressure, LE Vac and HE Vac on the Pumpout Log Sheet.
- 5.22 Verify that PCV-33 is on Valve and Manual. Open PCV-33 Slowly while watching Gauge P-1. Adjust PCV-33 to keep the Pressure as read on P-1 at about 0 PSI and Stable.
- 5.23 Set PCV-33 to Regulate and Seal.
- 5.24 Align Red Pointer with Black Indicator which should be at or very close to 0.
- 5.25 Switch PCV-33 to Auto. Now the Vacuum Suction Valve (PCV-33) is being regulated to keep the Vacuum Pump output pressure into the Compressors at the set pressure of about 0 PSI.
- 5.26 Set PCV-33 to Valve. The Red Pointer now indicates how much PCV-33 is open. Gauge P-1 will start to go negative after PCV-33 is fully open.

- 5.27 When P-1 is at 6" of vacuum, Turn One Compressor OFF. PCV-33 may close slightly - wait for it to re-open. Gauge P-1 will start to go negative after PCV-33 is fully open.
- 5.28 Crack Open HOV-15 and HOV-9 to keep P-1 at about 0 PSI.
- 5.29 When Blower No. 2 Ready Light comes ON (at a vacuum of about 28"), turn Blower No. 2 ON. Record Time, Tank Pressure, LE Vac and HE Vac on the Pumpout Log Sheet.
- 5.30 Keep Cracking Open HOV-15 and HOV-9 to keep P-1 at about 0 PSI.
- 5.31 Continue pumping for 15 minutes after starting Blower No. 2.
- 5.32 Close HCV- 1.
- 5.33 Turn Vacuum Pumps OFF. Record Time, Tank Pressure, LE Vac and HE Vac on the Pumpout Log Sheet.
- 5.34 Close HCV-53.
- 5.35 Close HOV-10 and IMMEDIATELY Open HOV-15 and HOV-9. This puts the Compressors in Bypass.
- 5.36 Shut the Compressor OFF.
- 5.37 Close HOV-6, HOV-9 and HOV-15. Leave SF6 mix in lines.
- 5.38 Open V-45A Vent Valve. Mark Check Sheet indicating Air in the Vacuum Lines.
- 5.39 After venting is complete, Open HCV-54 to Exhaust.
- 5.40 Close V-45A and PCV-33.
- 5.41 Close V-3 and V-5
- 5.42 Close Water Supply Valves on Compressors.
- 5.43 Enter Storage Pressure in the Log.
- 5.44 Close Cold Water Valve on SF6 Heat Exchanger (valve with blue handle, overhead to right of Pumping Panel).
- 5.45 Turn Both Blower Switches OFF.
- 5.46 Set HOV-47 to Fill.

Sheet

- 5.47 Remove V-59 (Valves Locked) Key and Insert it in the MP-6 LE Door.
- 5.48 In the Pit below MP-6:
  - 5.48.1 Close 4 Hot Water Valves.
  - 5.48.2 Retract Radiation Source and Remove Key. Record Time on Pumpout Log
  - 5.48.3 Close HOV-29. Lock this valve CLOSED. Remove key and insert into the corresponding lock on L.E. Manway Door of MP-6.
- 5.49 Insert Radiation Source Key in MP-6 LE Door.
- 5.50 Open Tank Vent Valve (LE End, North Side) to admit air into Tank. Record Time on Pumpout Log Sheet
- 5.51 When Tank is at atmosphere, Open LE Manway Door. Record Time, LE Vac and HE Vac on Pumpout Log Sheet.
- 5.52 Close Tank Vent Valve.
- 5.53 In the gas house, CLOSE the three WEST BANK isolation valves.
- 5.54 Proceed to Tank Opening Instructions [Instructions For Entering MP-6](#).

**6. Documentation**

None

**7. References**

None

**8. Attachments**

None